


ATARI[®] 2600[™]

REMOTE CONTROL WIRELESS JOYSTICKS

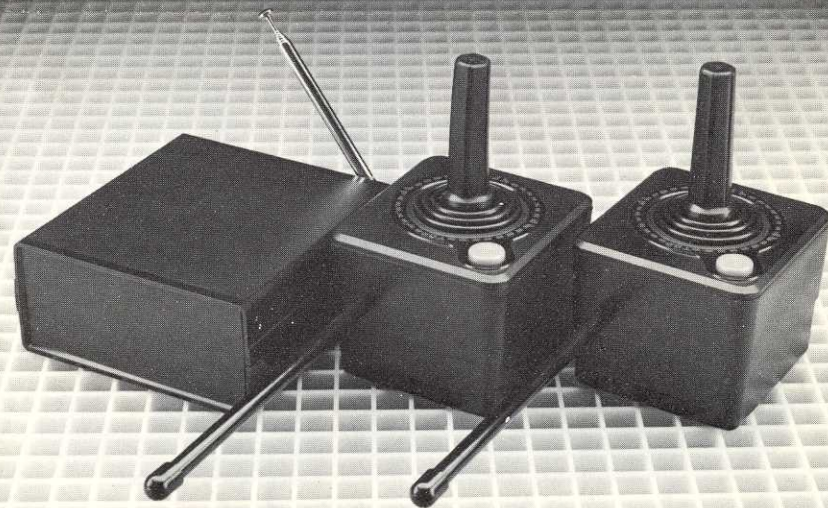

© 1983 ATARI, INC. ALL RIGHTS RESERVED

 A Warner Communications Company

CO21059 REV. 1

Printed in Korea

INSTALLATION INSTRUCTIONS

MODEL NO. CX42

INSTALLATION INSTRUCTIONS

Your ATARI® 2600™ Remote Control Joysticks are easy to hook up. Simply follow these instructions:



Figure 1

1. Turn the console POWER switch OFF on your ATARI 2600 console unit.
2. Unplug the AC power adapter that was supplied with your ATARI 2600 Video Computer System™ game from both the electrical outlet and from the console unit.
3. Unplug your standard ATARI Joystick Controllers. Replace them with the right and left cables from the ATARI Remote Control Receiver Unit. The cable labeled RIGHT plugs into the right controller jack; the cable labeled LEFT plugs into the left controller jack. (See Figure 2.)

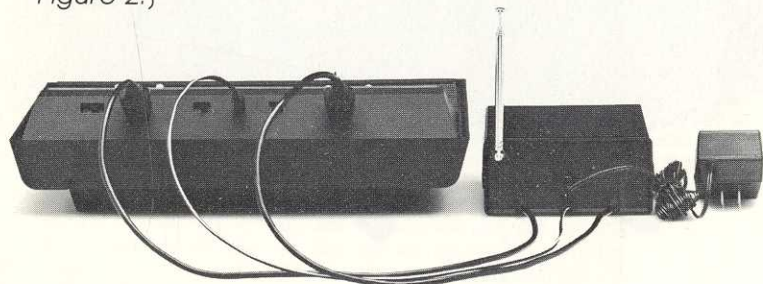


Figure 2

4. Plug the power cord from the Receiver Unit into the power jack at the back of the 2600 console unit (see Figure 2).
5. Plug the AC power adapter into the power jack of the Receiver Unit and into an electrical outlet (see Figure 2.)
6. Install one 9-volt battery into the base of each Remote Control Joystick as shown in Figure 3.
7. Place the 2600 console unit POWER switch to ON.
8. Place the ON/OFF switch of the Remote Control Joysticks to ON.
9. Sit back and enjoy playing your favorite ATARI Game Program™ cartridges with your Remote Control Joysticks.



Figure 3

To maintain top working condition of your ATARI 2600 Remote Control Joysticks, we recommend the following:

- Always turn the 2600 console unit POWER OFF before inserting or removing an ATARI Game Program cartridge.
- Do not place the Remote Control Receiver Unit behind the television set. We suggest you place it next to, or on top of the 2600 console unit.
- When playing one-player games, it may be necessary to have both Remote Control Joysticks turned on.
- If game play begins to respond abnormally, the batteries in one or both Remote Control Joysticks should be replaced.
- Always turn both the Remote Control Joysticks and the 2600 console unit OFF when not in use.
- Use your Remote Control Joysticks only with AC power adapter part number C010472.

(HINT: Many ATARI games can be reset by pressing the red controller button.)

ATARI® ACCESSORY LIMITED NINETY DAY WARRANTY

ATARI, INC. ("Atari") warrants to the original consumer purchaser that your ATARI accessory is free from any defects in material or workmanship for a period of ninety days from the date of purchase. If any such defect is discovered within the warranty period, Atari's sole obligation will be to repair or replace, at its election, the accessory free of charge on receipt of the accessory (charges prepaid, if mailed or shipped) with proof of date of purchase satisfactory to Atari at any ATARI Factory Authorized Service nearest you, or at one of the Atari Regional Service Centers listed below.

For the location of an ATARI Factory Authorized Service Center nearest you, consult the Yellow Pages of your local telephone directory, or call toll-free: (800) 672-1404 (in California) or (800) 538-8543 (Continental U.S.)

If an ATARI Factory Authorized Service Center is not conveniently located for you, write to one of the ATARI Regional Centers listed below:

ATARI, INC.
1312 Crossman Ave.
Sunnyvale, CA 94086

ATARI, INC.
12 B World's Fair Dr.
Somerset, NJ 08873

ATARI, INC.
5400 Newport Dr.
Suite 1
Rolling Meadows, IL 60008

ATARI, INC.
2109 East Division St.
Arlington, TX 76011

This warranty shall not apply if the accessory (i) has been misused or shows signs of excessive wear, (ii) has been damaged by being used with any products not supplied by ATARI, or (iii) has been damaged by being serviced or modified by anyone other than an ATARI Factory Authorized Service Center or ATARI Regional Service Center.

ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS, ARE HEREBY LIMITED TO NINETY DAYS FROM THE DATE OF PURCHASE. CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM A BREACH OF ANY APPLICABLE EXPRESS OR IMPLIED WARRANTIES ARE HEREBY EXCLUDED.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

OUT OF WARRANTY REPAIR SERVICE

If your ATARI accessory requires repair other than under warranty, please contact your local ATARI Factory Authorized Service Center for repair information. For the location of an ATARI Factory Authorized Service Center nearest you, consult the Yellow Pages of your local telephone directory or call toll-free:

(800) 672-1404 (in California) or (800) 538-8543 (Continental U.S.)

If an ATARI Factory Authorized Service Center is not conveniently located for you, ATARI, INC. will repair the accessory on receipt at one of the addresses previously listed.