 


BOWLING

Use your Joystick Controllers with this Game Program™.
For one-player games use the left controller. Hold the controller with the red button to your upper left toward the television screen.

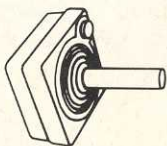

BOWLING

	1	2	3	4	5	6
GAME NUMBER	1	2	1	2	1	2
NUMBER OF PLAYERS	1	2	1	2	1	2
STEERABLE BALL						
STRAIGHT BALL						
CURVE BALL						


BOWLING

GAME PROGRAM™ INSTRUCTIONS



Model CX-2628

 


 A Warner Communications Company

ATARI, INC., Consumer Division
1195 Borregas Ave., Sunnyvale, CA 94086

BOWLING

Use your Joystick Controllers with this Game Program™. Be sure the Controllers are firmly connected to your Video Computer System™. For one-player games use the left controller. Hold the controller with the red button to your upper left toward the television screen. See section 3 of your owners manual for further details.

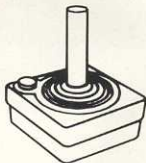

NOTE: To prolong the life and protect the electronic components of your Atari® Video Computer System, the console unit should be "off" when inserting or removing a Game Program.

HOW TO PLAY

Your objective is to roll as high a score as possible, whether you're playing a one-player or a two-player game. There are ten "pins" to knock down. You have two tries (or rolls) to knock down the pins each time you're up. Each game consists of ten "frames" (or turns).



If you succeed in knocking down all the pins on your first roll, it's called a "strike". A strike is marked with an "x" on the TV screen.



If you leave pins standing, but "pick them up" on your second try, it's called a "spare". Spares are marked with a "/" on the screen.



An "open frame" occurs when you fail to knock down all ten pins in two rolls. Open frames are indicated with a straight horizontal line (—) on the screen.

The ultimate goal in BOWLING is to roll 12 consecutive strikes for a "perfect" score of 300. See the SCORING section for a more detailed breakdown of point scoring.

CONSOLE CONTROLS

 
To start the action:

- Press the **game select** switch to choose the game you wish to play. The number of each game appears in the upper left corner of the screen. A 1 or a 2 is displayed in the upper right corner of the screen to indicate whether the game is for one or two players.
- Press the **game reset** switch to begin play.

During game play the number of each frame is displayed in the upper left corner of the screen for one-player and two-player games. In two-player games the number of the player who is currently up is shown in the upper right corner of the screen. (Player number 1 is blue; Player number 2 is green.)


CONTROLLER ACTION

Move your Joystick forward (away from you), and back (toward you), to position the Bowler. Press the red button on your Joystick Controller to release the ball.

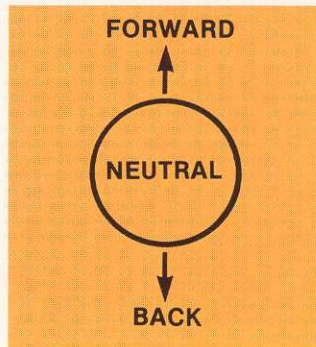


NOTE: Before pressing the red button to release the ball, the Joystick controls the positioning of the Bowler. After pressing the red button, the Joystick controls the direction of the ball as it moves down the "alley".

 In GAMES 1 and 2 the ball stays in a steady curve pattern once the Joystick is moved in either direction. The ball does not come out of this pattern until that roll is completed.

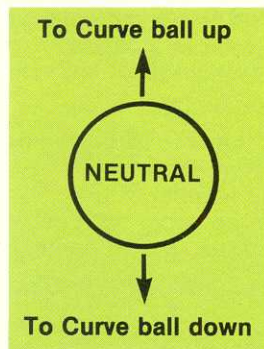

- Push the Joystick forward to curve the ball up toward the top of the screen.
- Pull the Joystick back to curve the ball down toward the bottom of the screen.

 In GAMES 3 and 4 you can steer the ball up and/or down while it is moving down the alley. If the Joystick is returned to its neutral position the ball straightens out.

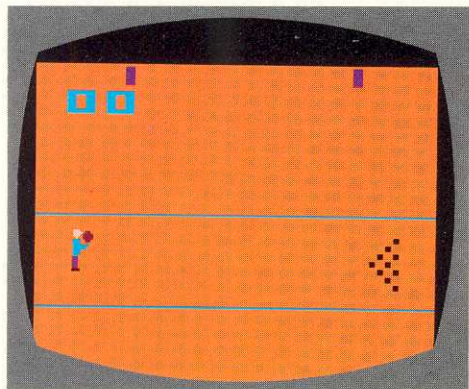


GAMES 5 and 6 are straight ball games. In these games the direction of the ball cannot be altered after it is released. Positioning the Bowler is the most important move.

GAMES 1, 3, and 5 are one-player games. GAMES 2, 4, and 6 are two-player games.

SCORING



 
STRIKE



SPARE



 OPEN FRAME

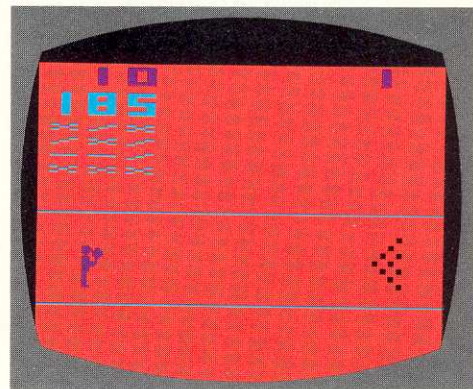

You have the possibility of scoring from 0 to 30 points in each frame. However, the difference in your score depends on whether you strike, spare, or leave an open frame.

For instance, in an open frame the number of pins you pick up (for both rolls) is simply added to your running score.

 
However, when you pick up all the pins on the second roll for a spare, your running score is not totalled immediately. Instead, the score for that frame remains empty until your

next roll. At that time, 10 is added to the number of pins you pick up. This subtotal is then added to your total running score.

Whenever you roll a strike your running score is not totalled until after the next TWO rolls. Ten points are then added to the total number of pins you pick up for those rolls. Therefore, if you roll three consecutive strikes, you score 30 points for the frame in which the first strike occurred.

- In two-player games, the score for the left player is displayed at the top left corner of the screen; the right player's score is shown on the right.
- In one-player games the score is on the left.

The following is an example of how a game might be scored.

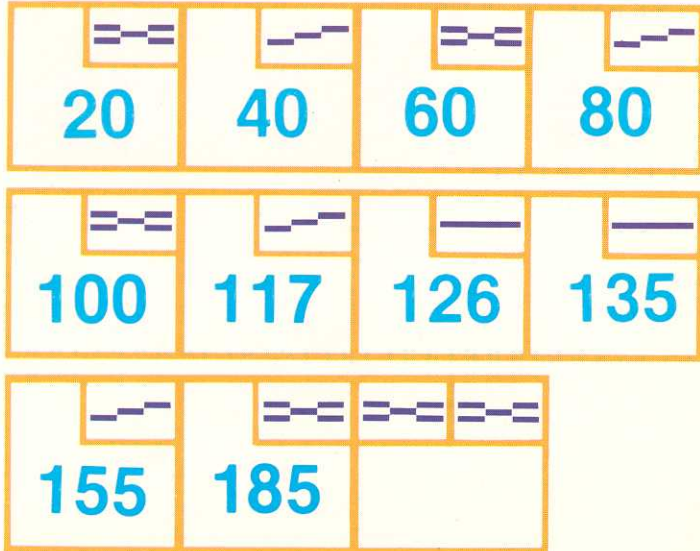

Tenth Frame Bonus

If you spare in the tenth frame, you are allowed one more roll. The number of pins you pick up, plus 10 (because of the spare), is then added to your total score.

If you strike in the tenth frame, the pins you pick up for the next TWO rolls are added to your total score.

HANDICAP (Difficulty Switch)

When the difficulty switch is in the **a** position the computer makes it more difficult for you to roll strikes and spares. (Use the left difficulty switch for one player games.)

For the beginning player, it is easier to obtain high scores when the difficulty switch is in the **b** position.

BOWLING

GAME PROGRAM™ INSTRUCTIONS



A Warner Communications Company

ATARI, INC., Consumer Division
1195 Borregas Ave., Sunnyvale, CA 94086

BOWLING

Use your Joystick Controllers with this ATARI® Game Program.™ Be sure the Controllers are firmly plugged into the LEFT and RIGHT CONTROLLER jacks at the rear of your ATARI Video Computer System.™ Hold the Controller with the red button to your upper left toward the television screen.



Use a Joystick plugged into the LEFT CONTROLLER jack for one player games.

Note: Always turn the console power switch OFF when inserting or removing an ATARI Game Program. This will protect the electronic components and prolong the life of your ATARI Video Computer System.

HOW TO PLAY

Your objective is to roll as high a score as possible, whether you're playing a one-player or a two-player game. There are ten "pins" to knock down. You have two tries (or rolls) to knock down the pins each time you're up. Each game consists of ten "frames" (or turns).



If you succeed in knocking down all the pins on your first roll, it's called a "strike". A strike is marked with an "x" on the TV screen.



If you leave pins standing, but "pick them up" on your second try, it's called a "spare". Spares are marked with a "/" on the screen.



An "open frame" occurs when you fail to knock down all ten pins in two rolls. Open frames are indicated with a straight horizontal line (—) on the screen.

The ultimate goal in BOWLING is to roll 12 consecutive strikes for a “perfect” score of 300. See the SCORING section for a more detailed breakdown of point scoring.

CONSOLE CONTROLS

 
To start the action:

- Press the **game select** switch to choose the game you wish to play. The number of each game appears in the upper left corner of the screen. A 1 or a 2 is displayed in the upper right corner of the screen to indicate whether the game is for one or two players.
- Press the **game reset** switch to begin play.

During game play the number of each frame is displayed in the upper left corner of the screen for one-player and two-player games. In two-player games the number of the player who is currently up is shown in the upper right corner of the screen. (Player number 1 is blue; Player number 2 is green.)


CONTROLLER ACTION

Move your Joystick forward (away from you), and back (toward you), to position the Bowler. Press the red button on your Joystick Controller to release the ball.

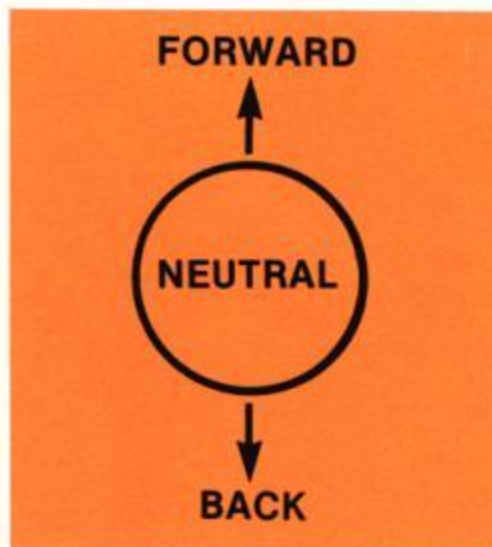


NOTE: Before pressing the red button to release the ball, the Joystick controls the positioning of the Bowler. After pressing the red button, the Joystick controls the direction of the ball as it moves down the "alley".

 In GAMES 1 and 2 the ball stays in a steady curve pattern once the Joystick is moved in either direction. The ball does not come out of this pattern until that roll is completed.

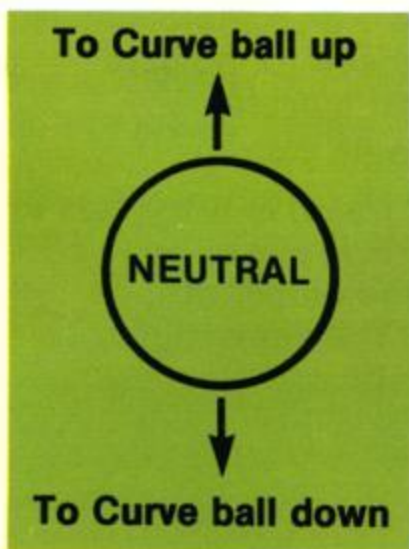

- Push the Joystick forward to curve the ball up toward the top of the screen.
- Pull the Joystick back to curve the ball down toward the bottom of the screen.

 In GAMES 3 and 4 you can steer the ball up and/or down while it is moving down the alley. If the Joystick is returned to its neutral position the ball straightens out.

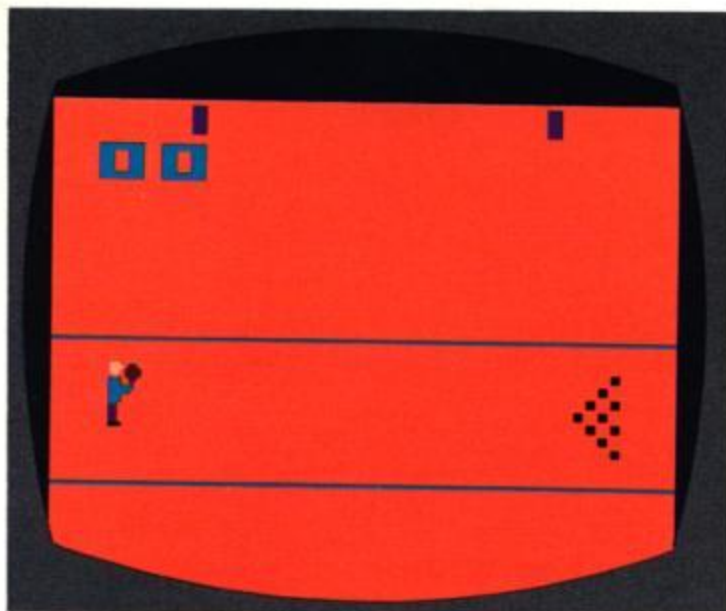

GAMES 5 and 6 are straight ball games. In these games the direction of the ball cannot be altered after it is released. Positioning the Bowler is the most important move.

GAMES 1, 3, and 5 are one-player games. GAMES 2, 4, and 6 are two-player games.

SCORING



STRIKE



SPARE



OPEN FRAME



You have the possibility of scoring from 0 to 30 points in each frame. However, the difference in your score depends on whether you strike, spare, or leave an open frame.

For instance, in an open frame the number of pins you pick up (for both rolls) is simply added to your running score.

However, when you pick up all the pins on the second roll for a spare, your running score is not totalled immediately. Instead, the score for that frame remains empty until your













next roll. At that time, 10 is added to the number of pins you pick up. This subtotal is then added to your total running score.

Whenever you roll a strike your running score is not totalled until after the next TWO rolls. Ten points are then added to the total number of pins you pick up for those rolls.

Therefore, if you roll three consecutive strikes, you score 30 points for the frame in which the first strike occurred.

- In two-player games, the score for the left player is displayed at the top left corner of the screen; the right player's score is shown on the right.
- In one-player games the score is on the left.

The following is an example of how a game might be scored.

 20	 40	 60	 80
 100	 117	 126	 135
 155	 185		

Tenth Frame Bonus

If you spare in the tenth frame, you are allowed one more roll. The number of pins you pick up, plus 10 (because of the spare), is then added to your total score.

If you strike in the tenth frame, the pins you pick up for the next TWO rolls are added to your total score.

 
HANDICAP (Difficulty Switch)

When the difficulty switch is in the **a** position the computer makes it more difficult for you to roll strikes and spares. (Use the left difficulty switch for one player games.)

For the beginning player, it is easier to obtain high scores when the difficulty switch is in the **b** position.

BOWLING

Use your Joystick Controllers with this Game Program™. For one-player games use the left controller. Hold the controller with the red button to your upper left toward the television screen.

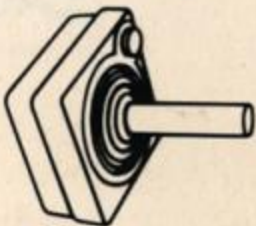

BOWLING

	1	2	3	4	5	6
GAME NUMBER	1	2	3	4	5	6
NUMBER OF PLAYERS	1	2	1	2	1	2
STEERABLE BALL			Red	Red		
STRAIGHT BALL					Pink	Pink
CURVE BALL	Dark Purple	Dark Purple				

BOWLING

ATARI® GAME PROGRAM™ INSTRUCTIONS




ATARI®

A Warner Communications Company 

CX2628

COMPLETE
GAME PLAY
INSTRUCTIONS

ONE AND TWO-
PLAYER
GAMES

GAME SELECT
MATRIX
Section 6

TABLE OF CONTENTS

1. GAME PLAY	1
2. USING THE CONTROLLERS	1
3. CONSOLE CONTROLS	2
4. GAME VARIATIONS	2
5. SCORING	3
6. GAME SELECT MATRIX	4

NOTE: Always turn the console power switch off when inserting or removing an ATARI® Game Program™ cartridge. This will protect the electronic components and prolong the life of your ATARI Video Computer System™ game.

1. GAME PLAY

Your objective is to roll as high a score as possible, whether you're playing a one-player or a two-player game. There are ten "pins" to knock down. You have two tries (or rolls) to knock down the pins each time you're up. Each game consists of ten "frames" (or turns).

If you succeed in knocking down all the pins on your first roll, it's called a "strike". A strike is marked with an "x" on the TV screen.



If you leave pins standing, but "pick them up" on your second try, it's

called a "spare". Spares are marked with a "/" on the screen.

 


An "open frame" occurs when you fail to knock down all ten pins in two rolls. Open frames are indicated with a straight horizontal line (—) on the screen.



The ultimate goal in BOWLING is to roll 12 consecutive strikes for a "perfect" score of 300. See the **SCORING** section for a more detailed breakdown of point scoring.


2. USING THE CONTROLLERS

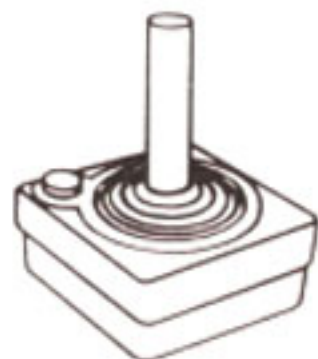

Use your Joystick Controllers with the ATARI® Game Program™ cartridge. Be sure the Joystick Controller cables are firmly plugged into the **CONTROLLER** jacks at the back of your ATARI Video Computer System™ game. For one-player games, use the Joystick Controller plugged into the **LEFT CONTROLLER** jack. Hold the

Joystick with the red button to your upper left, toward the television screen. See Section 3 of your owner's manual for further details.

 Move your Joystick forward (away from you), and back (toward you),

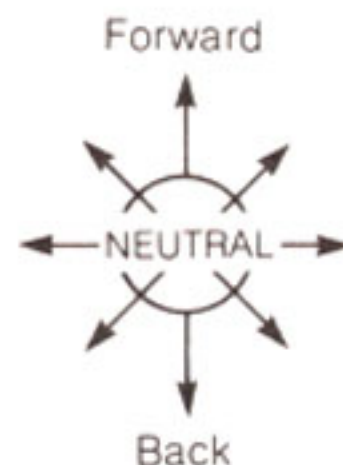

to position the Bowler. Press the red button on your Joystick Controller to release the ball.

NOTE: Before pressing the red button to release the ball, the Joystick

controls the positioning of the Bowler. After pressing the red button, the Joystick controls the direction of the ball as it moves down the "alley".

3. CONSOLE CONTROLS

GAME SELECT AND GAME RESET

To start the action:

- Press the **game select** switch to choose the game you wish to play. The number of each game appears at the upper left corner of the screen. A **1** or a **2** is displayed at the upper right corner of the screen to indicate whether the game is for one or two players.
- Press the **game reset** switch to begin play.

During game play the number of each frame is displayed at the upper left corner of the screen for one-player and two-player games. In two-player games the number of the player who is currently up is shown at the upper right corner of

the screen. (Player number 1 is blue; Player number 2 is green.)

DIFFICULTY SWITCHES

When the **difficulty** switch is in the **a** position, the computer makes it more difficult for you to roll strikes and spares. (Use the **left difficulty** switch is in the **b** position.)

For the beginning player, it is easier to obtain high scores when the **difficulty** switch is in the **b** position.

TV TYPE SWITCH

 
Set this switch to **color** if you have a color television set. Set it to **b-w** if you are playing the game in black and white.

4. GAME VARIATIONS


In **GAMES 1** and **2** the ball stays in a steady curve pattern once the Joystick is moved in either direc-

tion. The ball does not come out of this pattern until that roll is completed.

To Curve ball up

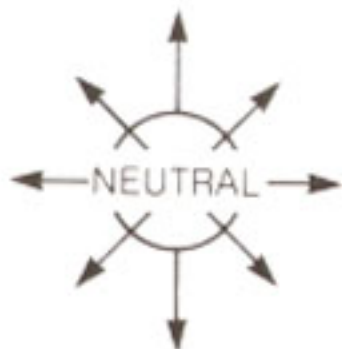

To Curve ball down

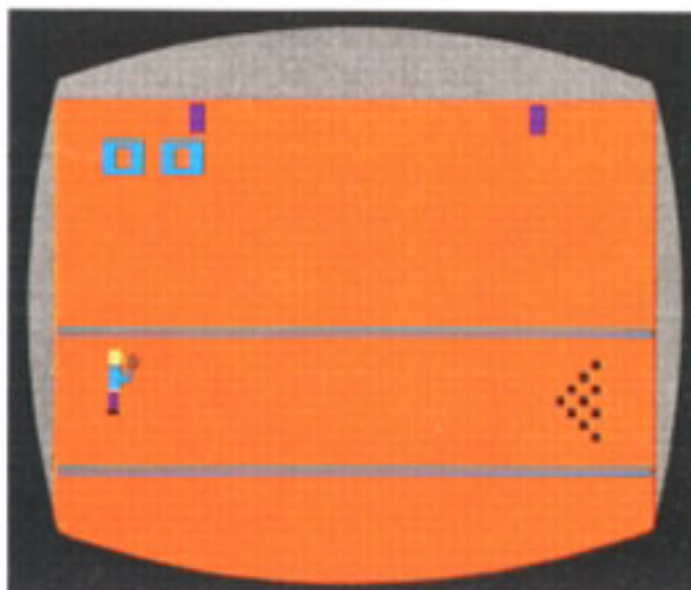 

GAMES 5 and 6 are straight ball games. In these games the direction of the ball cannot be altered after it is released. Positioning the Bowler is the most important move.

GAMES 1, 3, and 5 are one-player games. **GAMES 2, 4, and 6** are two-player games.

- Push the Joystick forward to curve the ball up toward the top of the screen.
- Pull the Joystick back to curve the ball down toward the bottom of the screen.

In **GAMES 3 and 4** you can steer the ball up and/or down while it is moving down the alley. If the Joystick is returned to its neutral position the ball straightens out.

5. SCORING



 
STRIKE



SPARE



OPEN FRAME

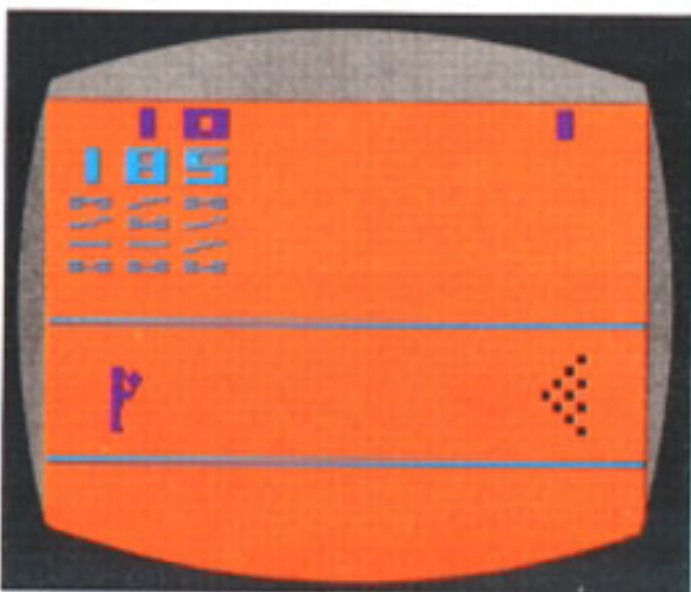

You have the possibility of scoring from 0 to 30 points in each frame. However, the difference in your score depends on whether you strike, spare, or leave an open frame.

For instance, in an open frame the number of pins you pick up (for both rolls) is simply added to your running score.













However, when you pick up all the pins on the second roll for a spare, your running score is not totalled immediately. Instead, the score for that frame remains empty until your next roll. At that time, 10 is added to the number of pins you pick up. This subtotal is then added to your total running score.

Whenever you roll a strike your running score is not totalled until after the next TWO rolls. Ten points are then added to the total number of pins you pick up for those rolls. Therefore, if you roll three consecutive strikes, you score 30 points for the frame in which the first strike occurred.

- In two-player games, the score for the left player is displayed at the top left corner of the screen; the right player's score is shown on the right.

- In one-player games the score is on the left.

The following is an example of how a game might be scored.

 20	 40	 60	 80
 100	 117	 126	 135
 155	 185	 195	 225

TENTH FRAME BONUS

If you spare in the tenth frame, you are allowed one more roll. The number of pins you pick up, plus 10 (because of the spare), is then added to your total score.

If you strike in the tenth frame, the pins you pick up for the next TWO rolls are added to your total score.

6. GAME SELECT MATRIX

Game Number	1	2	3	4	5	6
Number of Players	1	2	1	2	1	2
STEERABLE BALL						
STRAIGHT BALL						
CURVE BALL						

GAME PROGRAM™ CARTRIDGE LIMITED NINETY DAY WARRANTY

ATARI, INC. ("Atari") warrants to the original consumer purchaser that your ATARI® Game Program cartridge is free from any defects in material or workmanship for a period of ninety days from the date of purchase. If any such defect is discovered within the warranty period, Atari's sole obligation will be to replace the cartridge free of charge on receipt of the cartridge (charges prepaid, if mailed or shipped) with proof of date of purchase at either the retail store where the cartridge was purchased or at one of the Atari Regional Service Centers listed below:

Atari, Inc.
3099 Orchard Dr.
San Jose, CA 95134

Atari, Inc.
5400 Newport Dr.
Suite 1
Rolling Meadows, IL 60008

Atari, Inc.
43 Belmont Dr.
Somerset, NJ 08873

Atari, Inc.
2109 East Division St.
Arlington, TX 76001

This warranty shall not apply if the cartridge (i) has been misused or shows signs of excessive wear; (ii) has been damaged by being used with any products not supplied by ATARI, or (iii) has been damaged by being serviced or modified by anyone other than an ATARI Regional Service Center.

ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS, ARE HEREBY LIMITED TO NINETY DAYS FROM THE DATE OF PURCHASE. CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM A BREACH OF ANY APPLICABLE EXPRESS OR IMPLIED WARRANTIES ARE HEREBY EXCLUDED.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



A Warner Communications Company 

ATARI, INC., Consumer Division
P.O. Box 427, Sunnyvale, CA 94086